



PYRAMEX



RJ31H Series

STANDARDS

ANSI 107-2020 • TYPE R CLASS 3

Waterproof — ANSI 107-2020: AATCC 127

Waterproof polyester shell with zip out polar fleece liner // Heated jacket with 3 warming zones; 2 in front and 1 in back // Choice of three temperature settings // Lightweight over bank included // Zipper front closure with concealed detachable drawstring hood // 2" silver reflective striping // Elastic band at waist and wrists // Interior access zipper for print customization // Cell phone/radio chest pocket with clear panel // 2 mic tabs

● RJ3110H • S-5XL



WARMING ZONES

POCKETS

5 OUTER, 3 INNER

PYRAMEX[®]



P 800.736.8673 // F 901.861.4967 // W PYRAMEX.COM



PYRAMEX

STANDARDS

ANSI 107-2020 TYPE R CLASS 3 Not FR
Waterproof — ANSI 107-2020: AATCC 127

SPECS

MATERIALS

Jacket	300D polyurethane (PU) coated waterproof polyester shell 100% polyester
Interior	220gsm fleece Nylon-lined sleeves
Inner Lining	210T taffeta
Reflective Tape	Generic silver
Wrists	Waterproof elastic band

CLOSURE

Front	SBS zipper
Zipper Tape	100% polyester fabric
Zipper Teeth	Resin
Zipper Slider	Metal
Hood	Drawstring

REFLECTIVE STRIPING

- One 2" silver reflective stripe applied horizontally across lower chest dividing black material from lime material
- Two 2" silver reflective stripes applied vertically from top of horizontal stripe, over shoulders, to top of horizontal stripe on back
- Two 2" silver reflective stripes applied around each sleeve

POCKETS

- One outer right chest zipper pocket: 6.3" x 7.8"
- One outer left chest clear badge holder pocket with hook and loop closure: 6" x 3.5"
- One outer left arm split pencil pocket: 3" x 5"
- Two outer lower slash pockets zipper closure: 7.8" x 6.3"
- One inner right chest pocket with zipper closure: 5.9" x 7"
- One inner right chest pocket with hook and loop closure: 5.9" x 7"

POWER BANK

- USB 5000mAh power bank and charging cable included
- Average battery life: high: 2.5 hours | medium: 3.5 hours | low: 4.5 hours
- Jacket is compatible with any USB power bank

JACKET MEASUREMENTS

	S	M	L	XL	2X	3X	4X	5X
Chest Measurements	26"	27"	28"	29"	30"	31"	33"	34.5"

Jacket measurements are taken while garment is lying flat.
Please note: some size variation may occur.

WASHING INSTRUCTIONS

-  Hand wash cold
-  Use mild detergent
-  Air dry
-  Do not bleach
-  Do not iron
-  Do not force, knead, or beat
- Max 25 washes

USER INSTRUCTIONS AND WARNINGS

USER INSTRUCTIONS

- Fully charge the power bank prior to use with the jacket.
- Identify the USB plug located in the inside left chest pocket of the jacket.
- Plug the USB into the power bank and ensure power bank is on.
- Press/hold down the temperature control button located above the pocket for 2 seconds.
- When the red light is visible, heating feature is on.
- Press the temperature control button to change the heat setting: red is high, white is medium, and blue is low.
- Press the temperature control button for 2 seconds to switch off. The light will turn off and the heat feature will stop.

WARNINGS

- Do not use the heating feature if the power bank has not been plugged into the USB for over 2 years.
- Do not use high temperature water or strong detergent when washing the jacket.
- The jacket shell is waterproof, but the USB port and power bank are not waterproof. Do not use the heating feature or keep the power bank plugged into the USB port if the jacket gets wet. Turn off the power and stop using if the jacket is wet.
- The use time depends on the capacity of the power bank and the heat setting.



HEAT SETTINGS

- RED
High | Warmest
- WHITE
Medium | Warmer
- BLUE
Low | Warm

