

SL T2™ VISOR PROTECTOR

ENGINEERED PROTECTION THAT SURROUNDS

The SL T2 Visor Protector is a game changer in visor protection for the SL T2 Safety Helmet. Designed with durability and convenience in mind, this protector is the go-to solution for scratch free visors.



FEATURES

Enhanced Protection: Protects helmet visor from scratches and damage while not in use

Effortless Attachment: Attach and detach the protector with ease over the visor

i HPT2PV sold separately from the SL T2 Safety Helmet.

MATERIALS

Lens: PC (Polycarbonate)

⚠ WARNING: Cancer and Reproductive Harm –P65Warnings.ca.gov

GENERAL SPECIFICATIONS

Weight: 63.6g
Overall Length: 226mm
Overall Width: 138mm
Lens Thickness: 1.8mm
PD: 64mm
Lens Base: 8.11mm
Vertical Lens Measurement: 98mm

Updated as of 06.24

INSTRUCTIONS

To Attach Visor Protector to Helmet

1. Align both ends of the protector over the attached visor and clips in the accessory slots.
2. Firmly press the large mounting tab into the corresponding slot on the helmet to secure protector.

To Remove Visor Protector from Helmet

1. Pull both ends of the protector from the attached visor clips.
2. Firmly pull the large mounting tab from the helmet slot.

Visor protector must be worn over a visor attached with clips.



TOOLS AT YOUR FINGERTIPS

Learn more about the SL T2 Helmet and Accessories